

TARGUS
NOTEWORTHY®

External Drive
for DVD-ROM

TARGUS
Essential Accessories for Mobile Computing

NOTEWORTHY®
Making Your Mobile Life Easier.

Visit our Web site at: www.targus.com

Features and specifications are subject to change without notice. © 2002 Targus Corp.
400-0084-001B

USER'S GUIDE
Making Your Mobile Life Easier.

BRUSSELS HANNOVER BARCELONA TOKYO MILANO AMSTERDAM SINGAPORE LONDON PARIS NEW YORK LOS ANGELES TORONTO HONG KONG SYDNEY

 PMS Black
15%

 PMS Black
100%

Contents

External Drive	4
Introduction	4
System Requirements	5
Connecting the External Drive to Your Computer and Installing the Default Drivers	5
Installing the Driver Software	6
Upgrading to the Enhanced Performance Driver	6
Using the External Drive	7
Inserting and Removing a Disc	7
Playing Audio CDs	8
Reading Data DVDs	9
Playing DVD Movies	9
Hot Swapping	9
Things to Remember	9
Operating Hints	9
Safety Measures	10

Specifications	10
Troubleshooting	12
Solving General Problems	12
Changing the Drive Letter Assignment	13
Technical Support	13
Product Registration.....	14
Warranty	14
Regulatory Compliance	14
FCC (Federal Communications Commission).....	15

External Drive

Introduction

Thank you for purchasing a Targus Noteworthy External Drive. Light weight and ultra-portable, the external DVD-ROM drive runs off your computer's power supply, eliminating the need for an AC adapter. After installing the external drive and its drivers, you can use it at any time by inserting the PC Card cable or Cardbus card cable into your computer's Type II PC Card slot.

This user's guide describes how to connect the external drive to your computer, install default and enhanced performance drivers and how to operate the drive.

In addition to this user's guide, this package contains:

- DVD-ROM drive
- Two card cables (PC Card and Cardbus)
- Driver software CD-ROM
- DVD Player CD-ROM

The Targus Noteworthy External Drive comes with two card cables, a PC Card and a Cardbus. The PC Card connection is a 16-bit card cable that enables you to install the driver software and immediately use the external drive. You will also need the PC Card cable to run the recovery disc or a boot disc with the external drive.

The Cardbus connection is a 32-bit card cable that enables you to upgrade to the supplied enhanced performance driver, which gives optimum DVD movie playback and maximizes throughput for daily use.

System Requirements

To use the external drive, your computer must meet the following hardware requirements and run one of the operating systems listed in the table below.

Hardware

- PC with an Intel® Pentium® processor or equivalent and a hard disk drive
- 64 MB RAM or higher, depending on the operating system
- PCMCIA Card interface (type II or higher)
- CD-ROM drive

Operating System

- Windows® 98
- Windows® Millennium Edition
- Windows® 2000
- Windows® XP



NOTES: The external drive receives its power from your computer's PC Card slot, which must be in full compliance with PC Card specifications and supply a minimum of 5V/1A of power.

For the DVD movie playback feature to work, you must have a DVD-ROM decoder installed in your computer or a player application, such as DVExpress or Power DVD, set up under the Windows® 98/Me/2000/XP operating system.

Connecting the External Drive to Your Computer and Installing the Default Drivers

- 1 Turn on your computer (if it's not already on).
- 2 Attach the connector end of the PC Card cable to the external drive's cable port.




- 3 Plug the PC Card end of the cable into any Type II PC Card slot on your computer. The Found New Hardware Wizard screen appears and the operating system automatically installs the default drivers. If you are running the Windows® XP operating system, you may not see the Found New Hardware Wizard screen as installation runs in the background.
- 4 Follow any on-screen instructions to complete installation.

You can now begin installing the driver software.

Installing the Driver Software

After connecting the external drive to your computer using the 16-bit PC Card cable, you can now install the driver software.

 **NOTE:** Installing the external drive may change internal drive letter assignments. To keep the original drive letter assignments, you can change the letter for the combo drive. See “Changing the Drive Letter Assignment” on page 13.

- 1 From the desktop, double-click the **My Computer** icon.
- 2 Double-click the **Targus** drive.
- 3 Locate and double-click the **Install** icon.

The drivers are then copied to your computer’s hard disk drive. When copying is complete, the command prompt screen appears.

- 4 Press any key on your keyboard to complete the installation.

You are now ready to begin using your external drive.

Upgrading to the Enhanced Performance Driver

To increase DVD performance, you can connect the external drive to your computer using the 32-bit Cardbus card cable and upgrade to the enhanced driver. To do this:

- 1 Unplug the PC Card cable from the PC Card slot on your computer and disconnect the connector end of the PC Card cable from the external drive’s cable port.
- 2 Attach the connector end of the Cardbus card cable to the external drive’s cable port and plug the Cardbus card end of the cable into any Type II PC Card slot on your computer.

The Found New Hardware Wizard screen appears.

- 3 Click **Next**.

The Install Hardware Device Drivers screen appears.

- 4 Select “Search for a suitable driver from my device (recommended)” and click **Next**.

If you are running the Windows® XP operating system, select “Install from a list or specific location (Advanced)” and enter C:\cardbus, or click **Browse** and locate the CardBus folder, and skip to step 6.

The Locate Driver Files screen appears.

- 5 Select “Specify a location” and enter C:\cardbus or click **Browse** and locate the CardBus folder.

- 6 Click **OK**.

The Driver Files Search Results screen appears.

- 7 Click **Next**.

- 8 If the Digital Signature Not Found dialogue box appears, click either **Yes** or **Continue anyway** to continue.


- 9 Click **Finish** to complete the driver installation.

You are now ready to begin using your external drive with the Cardbus card cable and enhanced performance driver.


Using the External Drive

Inserting and Removing a Disc

- 1 Turn on your computer and press the eject button to open the tray.
- 2 To insert a disc, hold it by the edges and place it in the tray with the readable (plain) side down. If you are using a high capacity disc, place the side of the disc you want the drive to read facing down. Then, gently press down on the disc until it snaps into place.
- 3 To remove a disc, grasp it by the edges and gently pull up until the disc is released.

 **CAUTION:** Avoid touching the readable (plain) side(s) of a disc. Touching the readable side of the disc may cause read errors, poor performance or failed operation.

- 4 Close the media tray by gently pushing it until it “clicks” into place.

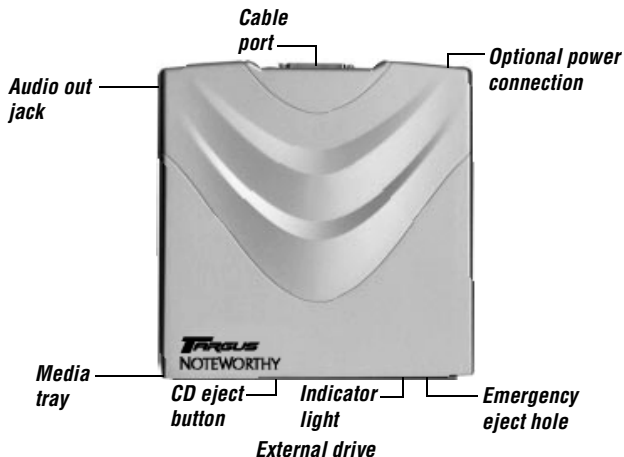

Removing a Disc Using Emergency Eject

If you need to remove a disc when there is no power to your computer, you can open the tray manually. To do this, gently insert a slim, straight object, such as a bent-open paper clip, into the emergency eject hole until you feel some resistance. Remove the paper clip and carefully open the tray by hand.

Playing Audio CDs

You can play audio CDs on your external drive by using the CD Player application included in the operating system. To hear the audio, you can either:

- Connect headphones or external speakers to the Audio Out jack on the external drive.
- Connect an audio cable from the Audio Out jack on the external drive to the Line In jack on your computer.

Reading Data DVDs

You can read data DVDs without installing any special software.

Playing DVD Movies

To play back movies, you must have a DVD-ROM decoder installed in your computer or have a DVD player application set up under the Windows® operating system.

Hot Swapping

You can connect and disconnect the external drive while the computer is running. To attach the external drive, just insert the PC Card cable into your computer's Type II PC Card slot.

To remove the PC Card cable while the computer is turned on:


- 1 Double-click the **PC Card** icon in the system tray or click **Start, Settings, and Control Panel**.
- 2 Double-click **PC Card (PCMCIA)**.
- 3 Highlight the PC Card cable and click **Stop**.
The message "You may now safely remove the card" appears.
- 4 Remove the PC Card cable from your computer.

Things to Remember


Operating Hints

- Use the emergency eject mechanism only if the external drive is not connected to your computer or if the computer's battery is flat and there is no power available for the eject button. Excessive use of the emergency eject mechanism may damage it and cause the mechanism to stop working.
- Never press the eject button while the drive is accessing a disc.
- The external drive operates in either an upright or horizontal position. To prevent possible damage, avoid changing the drive's position while it is in use.
- Avoid using or storing the external drive in extreme temperatures. The environmental specifications while operating are 50-113° F (10-45° C).

- After transporting the external drive, allow it to reach room temperature before using it.

 CAUTION: Changes in temperature during transport, particularly from a cool to a warmer temperature, can cause condensation to form in the drive and may result in operating problems. Allowing the drive to reach room temperature helps to prevent this.


- Avoid using the external drive in dusty or humid surroundings.
- A short delay is normal before the external drive reads an audio CD, CD-ROM, DVD or DVD-ROM.

 WARNING: Never clean the external drive with a commercially available CD or CD-ROM cleaning set as doing so may cause damage to the drive.

Safety Measures

- Any attempt to disassemble, adjust or repair the external drive may result in exposure to laser light or other safety hazards.
- This is a Class 1 Laser Product. This product complies with all applicable safety standards, DHHS Rules 21 CFR Chapter 1, Sub chapter J. The laser beam generated is totally enclosed during all modes of normal operation, and no hazardous laser light is emitted from the drive.

Specifications

 NOTE: Specifications are for all models unless indicated otherwise.

Models

NWDVD03 and NWDVD04

Dimensions

Length: 6.81 inches (17.3 cm)

Width: 5.35 inches (13.6 cm)

Height: 0.78 inches (2 cm)

Weight

0.9 pounds (450 g)

Connection to the computer

PC Card cable or Cardbus card cable via PC Card slot (PCMCIA, Type II)

Voltage

DC + 5V± 5%

Data Buffer

512 kB

Access Time

DVD: 130 ms (average)

CD: 95 ms (average)

Maximum Speed

CD-Mode: 24x CD speed (3,600 KB/s)

DVD-Mode: 8x DVD speed (10,816 KB/s)

Media Formats

The external drive reads formats according to the following CD (compact disc) and DVD (digital versatile disc) standards:

- MS-DOS® operating system data CDs (High Sierra, Mode 1 & Mode 2 complying with ISO 9660)
- Kodak Photo CDs (single- and multi-session)
- CDI, CDI-Ready, CD-Midi, CD-R, CD-RW, CD Plus
- Data-CDs (Joliet)
- UDF (Universal Disc Format)
- CD-TEXT, CD-EXTRA
- CD-ROM XA
- Audio CDs
- Video CDs
- Mixed Mode CDs
- CD-Digital Audio
- DVD-ROM, DVD-R
- Enhanced CD
- i-trax CD
- DVD-Video

Storage Capacity

DVD-ROM type description	DVD-5	DVD-9	DVD-10	DVD-18
Capacity according to the manufacturer	4.7 GB	8.5 GB	9.4 GB	17 GB
Actual capacity	4.38 GB	7.96 GB	8.75 GB	15.92 GB
Written sides	1	1	2	2
Layers per side (referring to the information-carrying layer of the disc)	1	2	1	2

Troubleshooting

To view Frequently Asked Questions and download Driver updates, visit our Web site at:
<http://www.targus.com/support>

Solving General Problems

If the external drive is not functioning:

- Verify that your system meets the hardware requirements. See “System Requirements” on page 5.
- Check that the drive is turned on and getting power.
- Make sure the cable is firmly attached to the drive and that the PC Card is fully inserted into the PC Card slot of your computer.
- Remove the driver software and reinstall it. To do this:
 - 1 Insert the driver software CD into your computer’s CD-ROM drive.
 - 2 From your desktop, double-click the **My Computer** icon.
 - 3 Select the CD-ROM drive, double-click the **DriverRemove.exe** file and follow the on-screen instructions.

If there is no sound when using the external drive, check that:

- The disc you are using is an audio disc or supplies audio output.
- The headphones/speakers are correctly connected.
- The cable is in good condition.
- The volume is turned up.
- The audio software is installed.

Changing the Drive Letter Assignment

The following steps describe how to change the drive letter for the external drive under the Windows® 95/98/Me operating system.

- 1 Click **Start**, **Settings**, and then **Control Panel**.
- 2 Click **System** and select the **Device Manager** tab.
- 3 Click either **DVD-ROM** or **Drive**, then **external drive**.
- 4 Click **Properties**, then **Settings**.

The current drive letter assignment and the reserved drive letters appear.

- 5 Under Reserved Drive Letter enter the letter you want to represent the external drive.
- 6 Click **OK**.



NOTE: You must restart your computer for the changes to take effect.

Technical Support

In the unlikely event that you encounter a problem with your Targus accessory, please contact our technical support team at:

Email: techsupport@targus.com

Internet: <http://www.targus.com/support.asp>

Have the following information available:

- The serial number of your external drive (located on the back of the drive).
- The name and model of your computer and details of its hardware specification.
- The name and version number of your operating system and of the software that has the problem.
- A detailed description of the problem including exact error messages and when these errors occur.
- What you do to replicate the problem.
- If this is a new problem, whether you have recently changed your system configuration and in what way.

Our knowledgeable staff is also available to answer your questions through one of the following telephone numbers.

US

Monday through Friday, 8:00 a.m. (08:00) to 8:00 p.m. (20:00) Eastern time: 800-283-6325

Canada

Monday through Friday, 9:00 a.m. (09:00) to 5:00 p.m. (17:00) Eastern time: 888-827-4877

Europe

Belgium	+32 0 02-717-2451	Spain	+34 0 91-745-6221
Denmark	+45 0 35-25-8751	Sweden	+46 0 8-751-4058
France	+33 0 1-64-53-9151	Switzerland	+41 0 1-212-0007
Germany	+49 0 21-16-579-1151	United Kingdom	+44 0 20-7744-0330
Italy	+39 0 24-827-1151	Eastern Europe & others	+31 0 53-484-9479
Netherlands	+31 0 53-484-9470		

Product Registration

For more efficient customer service and to activate the product's warranty, Targus recommends that you register your Targus accessory shortly after purchasing it.

To register your Targus accessory, go to: <http://www.targus.com/registration.asp>

You will need to provide your full name, email address, phone number, and company information (if applicable).

Warranty

Targus warrants this product to be free from defects in materials and workmanship for one year. If your Targus accessory is found to be defective within that time, we will promptly repair or replace it. This warranty does not cover accidental damage, wear and tear, or consequential or incidental loss. Under no conditions is Targus liable for loss of, or damage to, a computer; nor loss of, or damage to, programs, records, or data; nor any consequential or incidental damages, even if Targus has been informed of their possibility. This warranty does not affect your statutory rights.

Warranty Registration at <http://www.targus.com/registration.asp>

Regulatory Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC (Federal Communications Commission)

Declaration of Conformity

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules, and RS 210 Regulations (Canada). These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Move the computer away from the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio technician for help

MS-DOS and Windows are registered trademarks of Microsoft Corporation. All other trademarks are the property of their respective owners.